


DOUBLE DUMMY

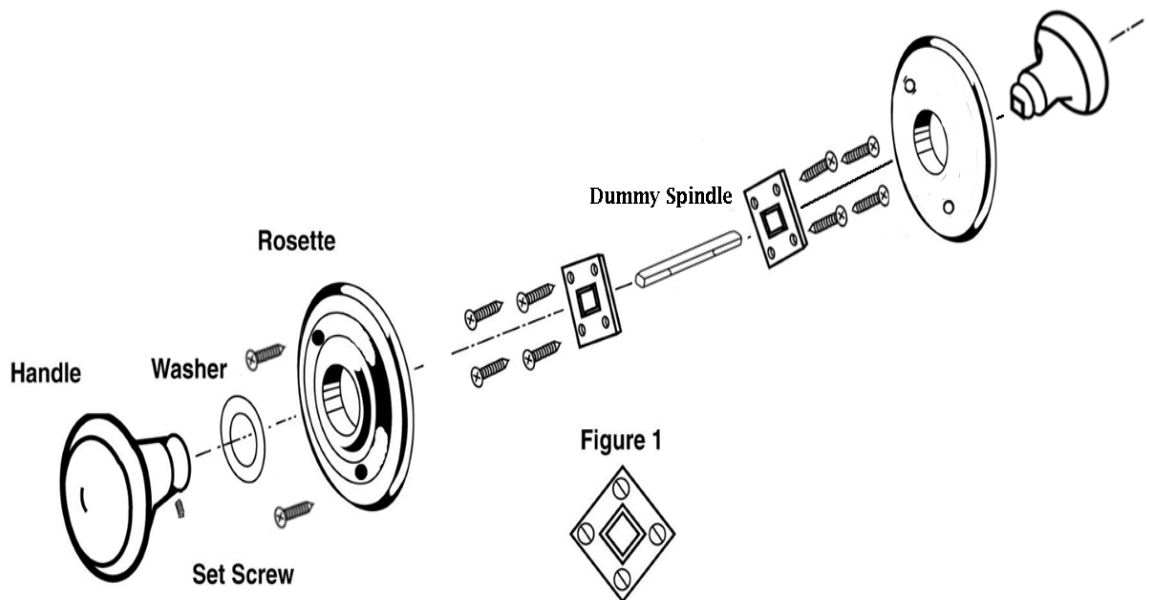

1. Mark the desired horizontal line (suggested height 38" from the floor). Then mark the desired vertical line (suggested 2-3/8" — 2-3/4" back-set). If using bi-fold doors, we suggest you place the knob in the center of the door.
2. Using the dummy plate in the diamond position (see figure 1) as a template, mark the screw holes and attach the dummy plate with screws provided. Dummy plates should be attached to both sides of the door and aligned to insure spindle will pass through plates. Use the passage spindle to go through both dummy plates and the door.
3. Place rosette and nylon washer over spindle and turn handle onto the spindle until it is tight and properly aligned. Then tighten set screws on knob or lever.