


HARDWARE INSTALLATION

Face Bore: 5/8" Edge Bore: 1"
Backset: 2-3/8" — 2-3/4" — 2"

Passage Set—Surface Mounted Rosettes or Plates (Knob or Lever)

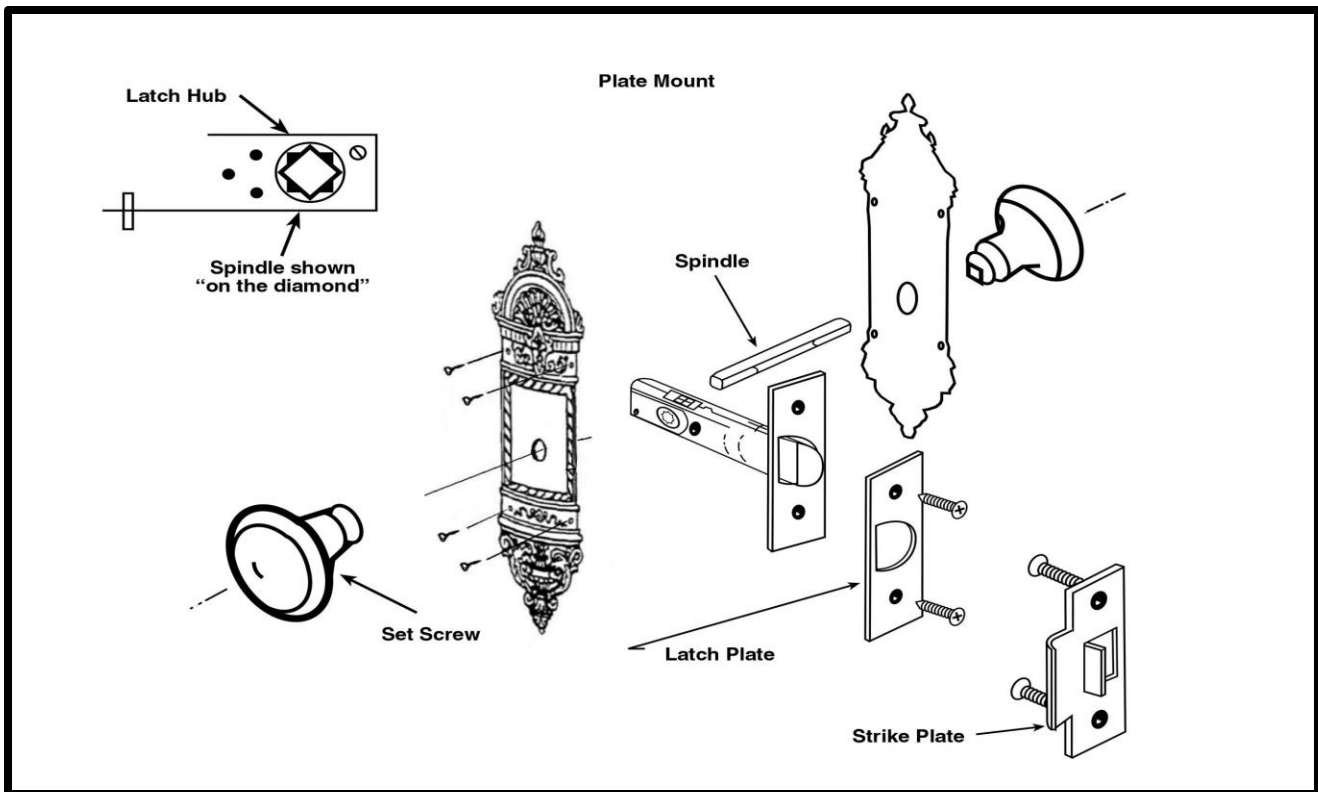

Insert spindle in spindle hole (through the latch) so that the spindle ends extend equally on both sides of the latch mechanism. The spindle should be in the diamond position as shown above. Slip the rosettes or plates over the spindle then install the handles onto the spindle, firmly. Attach the rosettes or plates to the door with the wood screws provided and tighten set screws on one knob or lever. Loosen the opposite handle until mechanism works freely in both directions; then tighten the set screws securing the knobs or levers to the spindle.

****Before closing the door, turn the handle in both directions to ensure proper movement. Then close the door and repeat the test.**

Enjoy your new hardware!