


## HARDWARE INSTALLATION

Face Bore: 1-3/4"    Edge Bore: 1"

Backset: 2-3/8" — 2-3/4" — 2"

### **Privacy Set—Surface Mounted Rosettes or Plates (Knob or Lever)**

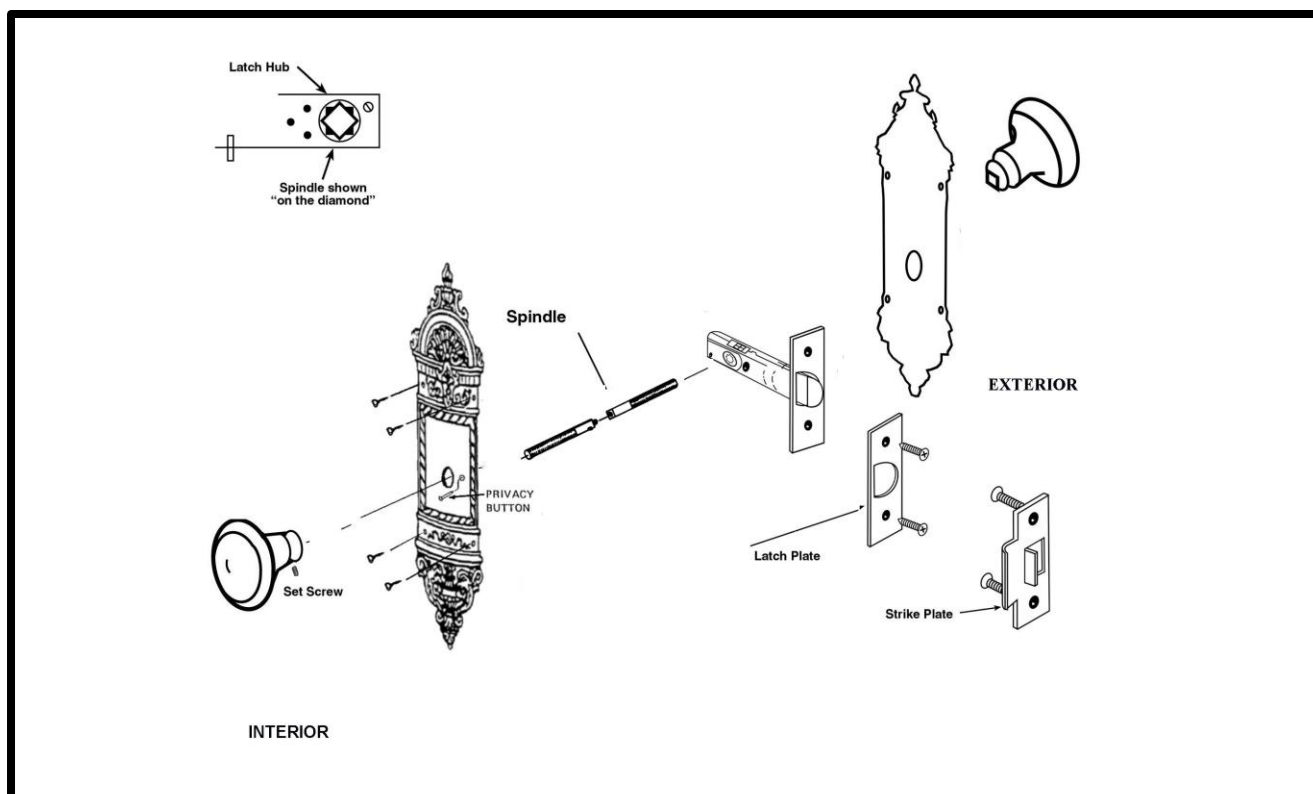

Take split spindle and hand tighten; then unscrew one full turn from other half of spindle. Insert spindle into spindle hole on diamond (see figure above) until the notch on the spindle meets the hole on interior side. Slip plates over the spindles. Attach handle onto door firmly. Be sure privacy button hole and safety hole are opposite each other. Insert privacy button in hole provided in plate. Be sure privacy button hole and safety hole are aligned, and insert privacy button before attaching plates tightly. Attach plates with wood screws provided and tighten set screws on one handle. Loosen other handle until mechanism works free; then tighten set screws.

#### FINAL CHECK

Before closing door, turn interior handle. Repeat and engage privacy button and turn the knob in both directions. This will disengage privacy button and allow passage through the door.

Engage privacy button and turn the exterior handle in both directions. This WILL NOT disengage button. While privacy button is still engaged, push in on the latch tongue; the privacy button will disengage. Close door and retest.