


## SINGLE DUMMY INSTALLATION INSTRUCTIONS SURFACE AND SELF-ALIGNING MOUNT

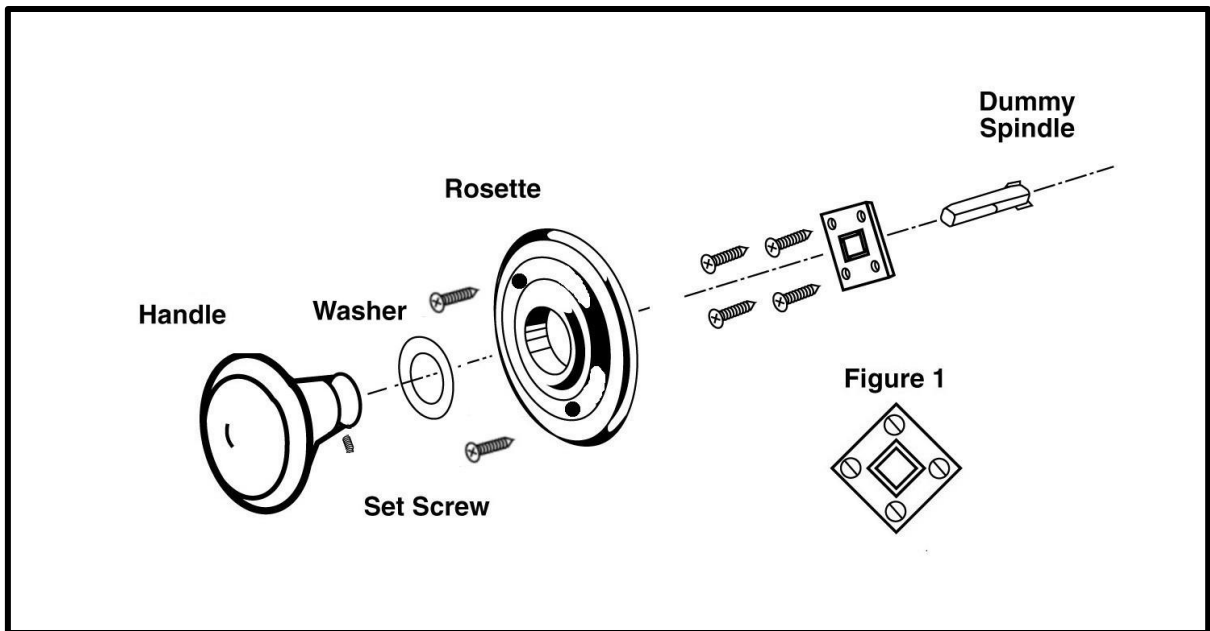

1. Mark the desired horizontal line (suggested height 38" from the floor). Then mark the desired vertical line (suggested 2-3/8" — 2-3/4" backset). If using bi-fold doors, we suggest you place the knob in the center of the door.
2. Using the dummy spindle in the diamond position (see figure 1) as a template, mark screw holes and attach dummy spindle with screws provided.
3. Place rose and washer over spindle and turn handle onto the spindle until it is tight and properly aligned. Then tighten set screws.

Note: Be sure set screws on handle are inserted at a 45° angle as shown. This will ensure proper seating of set screws on the spindle.